

1

When using electrical appliance, basic safety precautions should always be followed including the following:

IMPORTANT SAFEGUARDS 🖊

Read all instructions.

• Before using check that the voltage of wall outlet correspond to the one shown on the rating plate.

• Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to after sale service centre of Feller for examination, repair or electrical or mechanical adjustment.

• If the supply cord is damaged it must be replaced by Feller in order to avoid a hazard.

• Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.

- Do not let cord hang over edge of table or hot surface.
- Do not immerse upper part of blender into water as this would give rise to electric shock.

• Close supervision is necessary when your appliance is being used near children or infirm persons.

- Avoid contacting moving parts.
- Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender.
- The appliance cannot be used for chopping ice or blending hard and dry substance, otherwise the blade could be blunted.
- To reduce the risk of injury, never place cutting blade on base without first putting bowl properly in place.
- Be sure chopper lid is securely locked in place before operating appliance.
- The use of accessory not recommended by Feller may cause injuries to persons.
- Do not operate the appliance for other than its intended use.

• This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.

• Children should be supervised to ensure that they do not play with the appliance.

• Do not use outdoors.

Save these instructions.

HOUSEHOLD USE ONLY

KNOW YOUR BLENDER (It is suitable for blending vegetable and fruit)





Motor Unit: Turn the motor unit anti-clockwise to lock with the chopper lid.

Detachable Chopper Lid: Turn it anti-clockwise to lock with chopper bowl. To unlock, turn in opposite direction.

Detachable Chopper Blade: The edge of blade is very sharp. handle with care to avoid any injury. Always handle the plastic shaft.

Bowl: Place food into it prior attaching the chopper lid.

KNOW YOUR ACCESSORY-BEATER (for mixing egg white)

Motor Unit: Turn the motor unit anti-clockwise to lock with the beater.

Product Accessories:

Whisk: It is used to whisk the egg white. The whisked egg white can be made cream.

Cup: Place two egg whites into the cup one time.

H

LOCK

LOCK

LOCK

USING YOUR BLENDER

Before the first use, clean the blender according to the section of "quick cleaning".

The time running unit without load can't exceed 15 seconds.



- Blades are very sharp, handle with care.
- Ensure that the hand-held blender is unplugged from the power outlet before assembling or removing attachments.

INSTRUCTION FOR CHOPPER



Fig. 1





Max operation duration under high speed per time cannot exceed one minute.

1. Place the chopper bowl on a clean, level surface.

2. Assemble the stainless steel blade into the chopper bowl, as shown in Fig.1.

3. Place food into the chopper bowl.

Note: The max quantity of meat can't exceed 200 grams in every blending.

4. Attach the Lid onto the chopper bowl and turn it in clockwise direction until it locks into position. (See Fig. 2)

To detach the lid, turn in adverse direction.

5. Insert the top part of the chopper into the hole of the chopper lid, and turn in clockwise direction to lock. (See Fig. 3)

6. Plug the appliance to power outlet and depress the switch to begin operation.

7. To stop the appliance release the switch at the top of the motor unit.

1 Caution:

• To reduce the risk of injury, never place cutting blade on base without first putting bowl properly in place.

• Be sure chopper lid is securely locked in place before operating appliance.

Max operation duration under high speed per time cannot exceed one minute.

1. To assemble the detachable shaft with the motor unit, turn the shaft anti-clockwise direction until tightened. To disassemble, just turn in the adverse direction.

2. Simply plug the hand-held blender to power outlet.

3. Lower the hand-held blender into food and depress the switch at the top of the motor unit.

4. To stop the hand-held blender release the switch at the top of the motor unit.

INSTRUCTION FOR EGG WHITE BEATER

Max operation duration under high speed per time cannot exceed 1 minute.

1. To assemble the egg white beater with the motor unit, turn the whisk anti-clockwise direction until tightened. To disassemble, just turn in the adverse direction.

2. Simply plug the hand-held blender to power outlet.

3. Place egg white into the cup, generally, put two egg white is enough.

4. Lower the hand-held blender into food and depress the switch at the top of the motor unit.

5. To stop the hand-held blender release the switch at the top of the motor unit.

CLEANING AND MAINTENANCE

1. Unplug the appliance and remove the detachable stem.

Note: Do not immerse the detachable stem of the blender in water because overtime the lubrication on the bearings may wash away.

2. Wash the detachable stem under running water, without the use of abrasive cleaner or detergents. After finishing cleaning the detachable stem, place it upright so that any water which may have got in, can drain out. The stem is dishwashing safe component.

3. Wash the cup, bowl, beater and blade in warm soapy water. The bowl and the beater are not recommend to place in dishwashing machine as the plastic component deteriorate through prolonged use of dishwasher cleaning.



Electric Shock Danger: Wipe the motor unit with a damp cloth. Never immerse it in water for cleaning as a electric shock may occur.

4. Dry thoroughly.



Caution: Blades are very sharp, handle with care.

5. Reassemble the blender shaft to motor unit then place it upright in wall bracket (see Fig.4) or hang it up for saving space.

Quick cleaning

Between processing tasks, hold the hand-held blender in the cup half filled with water and turn on for a few seconds.





You can fix the wall bracket as following:

1. Drill two same holes in wall and strictly follow the dimension as indicated in the fig.5.

- 2. Knock two plastic tubes in them with hammer.
- 3. Secure the bracket on wall with another two screws.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment.

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre.



۲. کاملاً خشک کنید.

نكته: تيغهها بسيار تيز هستند. احتياط كنيد.

۵. محور همزن را به بخش موتور وصل کنید و آن را به صورت عمودی در دیوار آویز قرار دهید.
یا آن را آویزان کنید تا در فضا صرفهجویی شود. (شکل ۴)

تمیزکاری سریع:

در وقفه های بین مخلوط کردن مواد غذایی، دستگاه را در ظرفی که تا نیمه از آب پر شده نگه دارید و چند ثانیه آن را به کار اندازید.

نصب ديوار آويز

شکل ۴



دیوارآویز را به روش زیر نصب کنید: ۱. دو سوراخ با فاصله های ذکر شده در شکل ۵ در دیوار ایجاد کنید. ۲. دو عدد «رولپلاک» پلاستیکی در سوراخها جا بزنید. ۳. دیوارآویز را با پیچهای ارایهشده بر روی دیوار محکم کنید.

دور انداختن دستگاه مطابق با اصول زیست محیطی



شما می توانید در حفظ محیط زیست سهیم باشید. لطفاً به یاد داشته باشید که مطابق مقررات محلی مربوط به دور انداختن وسایل برقی عمل کنید. دستگاه بلااستفاده را به محلهای ویژهی جمع آوری این زبالهها تحویل دهید. دستور العمل استفاده از مخلوطکن

حداکثر زمان عملکرد دستگاه درحالت سرعت زیاد.نباید هر بار بیش از یک دقیقه باشد. ۱. برای نصب محور جداشدنی بر روی بخش موتور، محور را پادساعت گرد بچرخانید. تا محکم شود. برای باز کردن آن، آن را در جهت عکس بچرخانید. ۲. دوشاخه را به پریز برق متصل نمایید. ۳. مخلوطکن را پایین آورید و در مادهی غذایی قرار دهید و دکمهی بالای بخش موتور دستگاه را فشار دهید. ۴. برای توقف عملکرد دستگاه، دکمهی مذکور را رها کنید.

دستور العمل استفاده از همزن سفيدهى تخممرغ

حداکثر زمان عملکرد دستگاه در حالت سرعت زیاد.نباید هر بار بیش از یک دقیقه باشد.

۱.برای وصل کردن همزن سفیدهی تخممرغ به بخش موتور دستگاه، سَریِ همزن را پادساعت گردبچرخانید تامحکم شود.برای جداکردن سَری، آن را در جهت مخالف بچرخانید.
 ۲. دو شاخهی دستگاه را به برق بزنید.
 ۳. سفیدهی تخممرغ را در ظرف دستگاه قرار دهید. بیش از دو عدد سفیده در آن نریزید.
 ۹. مخلوط کن را پایین آورید و دکمهی روی بخش موتور را فشار دهید.
 ۵. برای توقف عملکرد دستگاه دکمهی مذکور را رها کنید.

تمیزکاری و نگهداری

دوشاخه را از پریز برق و محور را از دستگاه جدا کنید.

نکته: محور جداشدنی را در آب فرو نبرید. در غیر این صورت، به مرور زمان روغنکاری بلبرینگها شسته می شوند و ازبین می رود.

۲. بدون استفاده از مواد پاککننده یسایا، محور جداشدنی را زیر آب جاری بشویید. پس از تمیزکاری محور، آن را در حالت عمودی قرار دهید تا آب داخل آن تخلیه شود. محور جداشدنی را می توان در ماشین ظرف شویی شست.

۳. ظرف و کاسه و همزن و تیغه را با آب گرم و مواد شوینده بشویید. کاسه و همزن را در ماشین ظرفشویی نشویید.زیرا در این حالت، قطعات پلاستیکی دستگاه به مرور زمان از بین می روند.

استفاده از دستگاه مخلوطکن

ییش از استفاده برای نخستین بار، مطابق دستورالعمل های بخش تمیزکاری سریع، دستگاه را تمیز کنید. دستگاه خالی را بیش از ۱۵ ثانیه به کار نیندازید.



دستور العمل استفاده از خردکن حداکثر زمان عملکرد دستگاه درحالت سرعت زیاد.نباید هر بار بیش از یک دقیقه باشد. کاسه را روی سطحی صاف و تمیز قرار دهید. ۲. تیغه را همانند شکل ۱، درون کاسه قرار دهید. ۳. مواد غذایی را درون کاسه بریزید. شکل ۱ ! نکتہ: بیشــترین مقدار گوشتی که می توان درون کاسه ریخت، ۲۰۰ گرم در هر بار استفاده است. ۴. دريوش كاسه را گذاشته و آن را در جهت چرخش عقربه های ساعت بچرخانید تا در محل خود محکم شود. (شکل ۲) ۵.قسمت بالایی خردکن را درون سوراخ دریوش گذاشته شکل ۲ و آن را در جهـت چرخش عقربه های سـاعت بچرخانید تا محکم شود. (شکل ۳) ۶. روشاخه را به پریز برق متصل و دکمه را فشار دهید تا عمليات شروع شود. ۷. برای متوقف نمودن عملیات، دکمه را رها کنید.

احتياط:

• برای پرهیز از زخمی شدن، همیشه ابتدا کاسه را درست درجایش محکم کنید.سیس تیغه برش را بر روی پایه قرار دهید. ییش از به کار انداختن دستگاه، مطمئن شوید که دریوش خردکن در جایش قفل شده باشد.









- در بیرون از منزل از دستگاه استفاده نکنید.
 - این دفترچه را نزد خود نگه دارید.

این دستگاه تنها برای استفاده در منزل مناسب است.



HM 230

فارسى

پیش از استفاده از وسایل برقی، هشدارهای ایمنی اولیه را می باید در نظر داشت:

هشدارهای مهم ایمنی

 ییش از استفاده از دستگاه، این دستورالعمل ها را به دقت بخوانید. پیش از زدن دوشاخهی دستگاه به برق، مطمئن شوید که ولتاژ منبع برق با ولتاژ درجشده در صفحهی مشخصات دستگاه یکسان باشد و این که پریز برق دارای اتصال زميني (ارت) باشد. اگر سیم برق یا قطعات اصلی دیگر دستگاه آسیب دیدهاند، از آن استفاده نکنید. اگر دســتگاه به زمين افتاد و آســيب ديد.آن را به مركز خدمات پس از فروش فلر تحويل دهيد تا آزمايش يا تعمير يا قطعات مكانيكي يا الكتريكي آن تنظيم شود. • اگر سیم برق دستگاه نیاز به تعویض دارد، لطفاً به نزدیک ترین مرکز مجاز خدمات یسازفروش فلر مراجعه نمایید تا مانع از بروز خطر شود. اگر از دستگاه استفاده نمی کنید، دوشاخه را از پربز برق جدا کنید. پیش از انجام هر گونه عملیات نگهداری، مطمئن شوید که دوشاخه دستگاهی به برق نیست. نگذارید سیم برق دستگاه خم یا بیش از حد کشیده شود یا با سطوح تیز و داغ تماس يابد. بخش بالایی مخلوط کن را در آب یا مایعات دیگر فرو نبرید. این کار ممکن است سبب برق گرفتگی شود. • هنگام استفاده از دستگاه در حضور کودکان و افراد معلول بسیار مراقب باشید. • از تماس با اجزای متحرک دستگاه بیر هیزید. هنگام مخلوط کردن، دست یا لوازم آشیز خانه را در ظرف دستگاه قرار ندهید.این کار ممكن است سبب آسيب ديدن دست يا دستگاه شود. از دستگاه برای خرد کردن یخ یا مخلوط کردن مواد خشک و سخت استفاده نکنید. • برای کاهش خطر زخمی شدن، ابتدا کاسه را در جایش قرار دهید و سپس تیغه برش را بر روی پایه بگذارید. • ييش از به كار انداختن دستگاه، مطمئن شويد كه درپوش دستگاه در جايش محكم شده باشد. برای اطمینان از ایمنی دستگاه، از قطعات یدکی و لوازم جانبی مورد تأیید فلر استفاده. کنید. این دستگاه برای استفاده افرادی(شامل کودکان) که از ناتوانی جسمی، حسی یا روانی رنج می برند.یا افرادی که تجربه و دانش کافی ندارند.در نظر گرفته نشده است. مگر این که دستورالعمل استفاده از دستگاه به آنان داده شود یا بر کار آنان نظارت شود. مراقب باشید که کو دکان با دستگاه بازی نکنند.

