

Foller[®]

User's Manual

Steam Cleaner



ST 1200

Steam Cleaner

TECHNICAL DATA

Rating Voltage: 230V

Rating Watt: 2000W

Rating Frequency: 50Hz

Max Capacity: 1000ml

IMPORTANT SAFEGUARDS

Read all the instructions before use.

To protect against electric shock, do not immerse cord, plug or appliance in water or other liquid.

Do not operate the appliance with a damaged cord, if the power cord is damaged or any improper performance of this item occurs, it should be repaired by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Close supervision is necessary when appliance is used near children.

Do not operate the appliance without water.

Do not leave appliance unattended while switched on, turn off the power switch and unplug the electrical cord when not in use and before servicing.

The appliance can be contained 1000ml water only, do not attempt to overfill.

It works with normal water only, as the detergents or other chemical substance are not required, it is safe for the environment.

Only rinse the appliance when cold, ideally prior to use. Never open the safety cap during operation, turn off the power switch and remove the main plug from the electricity supply, push the steam button to let steam/pressure out of the appliance completely, and allow the appliance to cool down for at least 30mins before opening the cap.

Do not use the appliance for any other use other than the intended use. This appliance is for household use only.

Do not attempt to insert any items (not supply by the manufacturer) into the water inlet or steam outlet.

Never turn the appliance over or on its side when operating it, or direct steam at any person, animals, plants or other electric appliance.

Use only as described in this manual. Use only manufacturer's recommended accessories.

SAVE THESE INSTRUCTIONS FOR FUTURE

KEY FEATURES OF THE STEAM CLEANER

The steam cleaner is a new way of cleaning that is effective and far more hygienic than conventional methods.


The steam cleaner with a high temperature steam is able to kill or remove the bacteria and dust mites.

The steam cleaner is a professional household assistant, it do not need to put any detergents or any chemical substance into the unit, only normal water is sufficient. It is not only can be used to clean floor, kitchen room, toilet and some covert place, but also can be used as garment cleaner.

Safety cap, when there is steam/pressure in the boiler and the cap can not be opened, no matter how hard you try, so it is safe for people who do not read up the instruction manual fully and attempt to open the cap during operation. As long as steam/pressure remain in the boiler and the cap is hard to be opened, in order to undo the cap, please follow the below instructions to do the needful accordingly.

PARTS IDENTIFICATION

- A. Safety Cap
- B. Main Body
- C. Steam Outlet
- D. Power Switch
- E. Flexible Hose
- F. Bent Nozzle
- G. Straight Nozzle
- H. Round Brush
- I. Extension Hose
- J. Bent Connector
- K. Holder
- L. Floor Brush
- M. Cloth Cover
- N. Garment Cleaner
- O. Base
- P. Measuring Cup
- Q. Soft Plate
- R. Cambered Brush
- S. Funnel

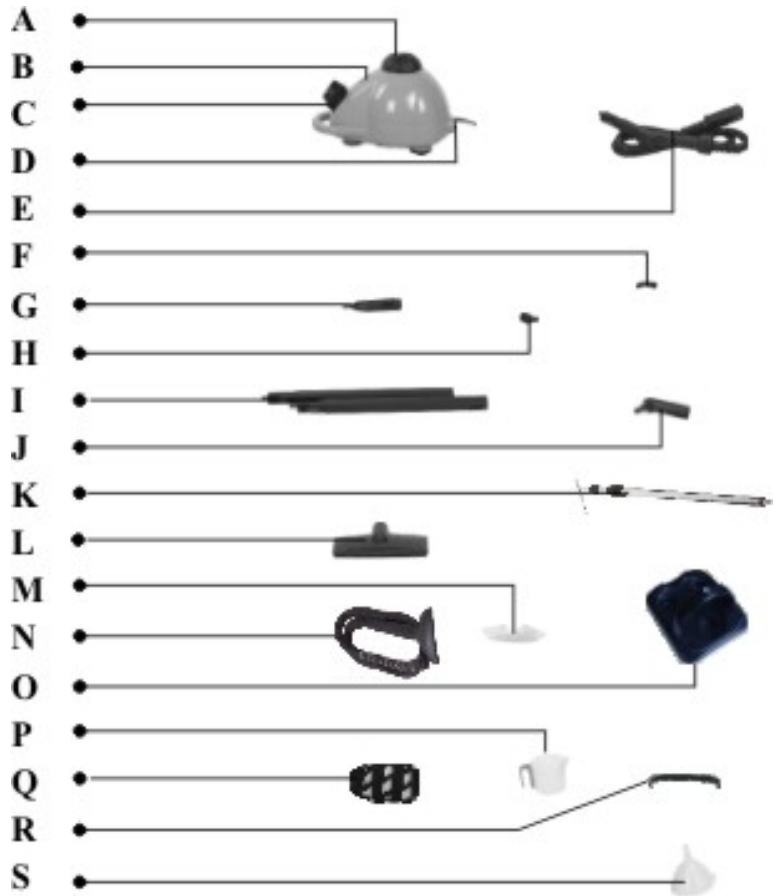

USAGE GUIDING

HOW TO ASSEMBLE THE ACCESSORIES

FLEXIBLE HOSE:

Open the safety cover and insert one end of the flexible hose into the designated opening (Steam outlet), turn it in clockwise direction to let it connect with the appliance completely.




NOTE:

Never turn on the power switch before assembling flexible hose.

IN ORDER TO MAKE CLEANING MORE EFFECTIVELY, PLEASE ATTACH SUITABLE ACCESSORIES ONTO THE FLEXIBLE HOSE.

STRAIGHT NOZZLE, BENT NOZZLE, ROUND BRUSH:

Insert the hose handle into the straight nozzle, please note that there is one locking switch is attached on the hose handle and make sure that it must be connected with the straight nozzle completely, then proceed with next step. At last, attach either bent nozzle or round brush onto the straight nozzle.

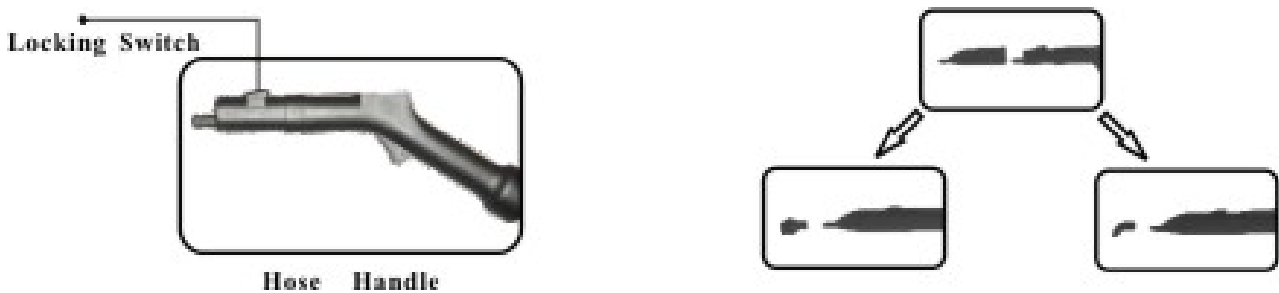

NOTE:

Never direct steam towards parts of your own body, or other persons/animals.

CLOTH COVER, FLOOR BRUSH, BENT CONNECTOR, EXTENSION HOSE:

Firstly, place the cloth cover over the floor brush. Secondly, insert the bent connector into the floor brush and turn it by 180 degree. Thirdly, insert the extension hose into the bent connector, then insert another extension hose into the first one. At last, insert the hose handle into the last extension hose.



NOTE:

Always make sure that each part must be connected with themselves completely, then turn on the power switch.

MAIN BODY

HOW TO FILL WATER

Open the safety cap, insert the designated funnel into the water inlet and use the designated measuring cup(500ml) to fill two cups of water into the appliance, then remove the funnel and close the cap tightly.



NOTE:


Never fill any detergents or any chemical substance into the appliance, as the product may become unsafely for use. Please fill normal water with the appliance.

WARNING:

Never overfill water with the appliance.

USAGE

Put the plug into the main socket and turn on the power switch, the required temperature will be reached after 6-10mins, and the red light will be on. And the steam is ready, press the trigger (which is attached on the hose handle) to release steam.

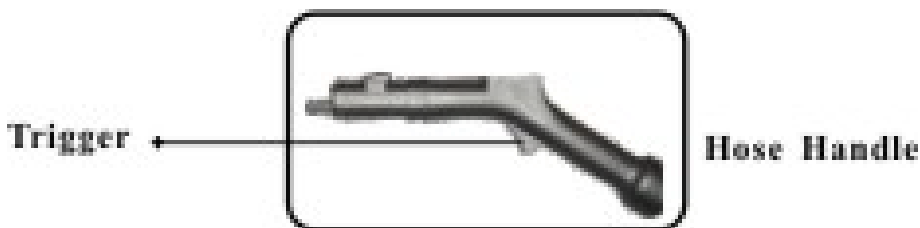

NOTE:

The appliance will be hot during operation, Please keep it away from the children.

In operation intermittent illumination of on/off of the red light is Normal.(AND THE RED LIGHT WILL NEVER BE ILLUMINATED WHILE IN USING THE GARMENT CLEANING FUNCTION.)

HOW TO OPEN THE SAFETY CAP AFTER USING

Turn off the power switch and remove the plug from the main socket, and press the trigger to release steam/pressure out of the appliance completely. When there is no steam release from the hose handle, and allow the appliance to cool down for at least 20-30mins, then you can remove the cap safety.

HOW TO REMOVE THE FLEXIBLE HOSE AFTER USING

Press the trigger until no steam is released from the hose handle, then push the flexible hose up to the surface of the steam outlet closely, and turn it in anti-clockwise direction.




NOTE:

Never remove the flexible hose from the appliance during operation.

GARMENT CLEANING FUNCTION

HOW TO ASSEMBLE THE GARMENT CLEANER

Place the appliance onto the base steadily, insert the holder into the designated opening and fix it tightly, then remove the cap from the appliance and assemble the garment cleaner onto the water inlet directly and screw it tightly.

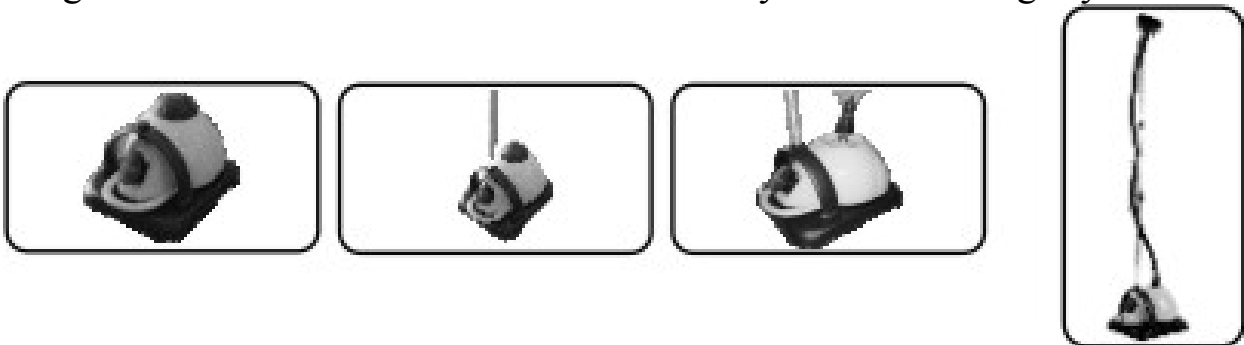

NOTE:

Never turn on the power switch before assembling the garment cleaner.

IN ORDER TO MAKE GARMENT CLEANING MORE EFFECTIVELY, PLEASE ATTACH EITHER CLOTH COVER OR CAMBERED BRUSH ONTO THE GARMENT CLEANER.

NOTE:

CLOTH COVER: Please make sure that the cloth cover is secured over the garment cleaner, then turn on the power switch.

CAMBERED BRUSH: There is one hole at the both sides of the garment cleaner, and follow the instruction to attach the cambered brush onto these two holes, then push the cambered brush up to the surface of the garment cleaner and fix it. Then turn on the power switch.



WARNING:

NEVER REMOVE EITHER CLOTH COVER OR CAMBERED BRUSH FROM THE GARMENT CLEANER WHILE IN USING.

USAGE

Adjust the holder to one suitable height, and keep garment cleaner on the top of the holder steadily.

Then plug in the appliance, turn on the power switch and the required temperature will be reached after a few minutes, as long as the steam is released from the garment cleaner automatically, then start using it.

In order to make your clothes more soft or straight, please put the soft plate on one of your palm and take it behind the clothes, then move the garment cleaner on the surface of the clothes slowly.



HOW TO REMOVE THE GARMENT CLEANER AFTER USING

Keep the garment cleaner on the top of the holder steadily, let it release the steam by itself.

Then, remove the plug from the main socket and turn off the power switch, after a few minutes, when there is no steam emit from the garment cleaner, and

allow the appliance to cool down for at least 20-30mins, then you can remove the garment cleaner from the appliance safely.

WARNING

IT IS STRICTLY LIMITED CHOOSE ONE BETWEEN FLEXIBLE HOSE AND GARMENT CLEANER TO ATTACH ONTO THE APPLIANCE, BOTH ARE NOT ALLOW TO USE TOGETHER. PLEASE ATTACH EITHER ONTO THE APPLIANCE BEFORE TURN ON THE POWER SWITCH.

MAINTENANCE AFTER USING

Always keep the appliance clean and dry after using.

Turn off the power switch and remove the plug from main socket after using.

Keep water out of the appliance after using.

Store the product in a cool, dry, indoor place.

روش استفاده

نگهدارنده را در ارتفاعی مناسب تنظیم نمایید و تمیزکننده پارچه را بر روی نگهدارنده، ثابت کنید. سپس دوشاخه دستگاه را به برق بزنید. کلید توان را روشن کنید؛ دمای مورد نیاز، پس از چند دقیقه به دست می‌آید. هنگامی که بخار به طور خودکار از تمیزکننده پارچه خارج شد، دستگاه را به کار ببرید. برای حفظ لطافت و ظاهر لباس‌ها، بالشتک را در دست بگیرید و آن را پشت پارچه لباس‌ها بگیرید و تمیزکننده را به آرامی بر سطح لباس بلغزانید.



روش جداکردن تمیزکننده پارچه پس از استفاده از دستگاه

تمیزکننده پارچه را بر روی نگهدارنده ثابت نگه دارید؛ بگذارید بخارش خارج شود. سپس دوشاخه را از برق بکشید و دستگاه را خاموش کنید. پس از چند دقیقه، هنگامی که دیگر بخاری در تمیزکننده باقی نمانده است؛ بگذارید دستگاه به مدت زمان دست کم ۲۰ تا ۳۰ دقیقه خنک شود. سپس می‌توان تمیزکننده را به گونه‌ای ایمن از دستگاه جدا کنید.

هشدار: بسیار مراقب باشید، از شلنگ انعطاف‌پذیر و تمیزکننده پارچه یکی را انتخاب نمایید و به دستگاه متصل کنید. هیچ‌گاه هر دو را با هم به کار نبرید. آنها را پیش از روشن کردن دستگاه، به آن وصل کنید.

نگهداری پس از استفاده

- پس از استفاده، دستگاه را تمیز و خشک نگه دارید.
- پس از استفاده، دستگاه را خاموش کرده و دوشاخه را از برق بکشید.
- پس از استفاده، آب درون دستگاه را تخلیه نمایید.
- دستگاه را در فضای سربسته، و در مکانی سرد و خنک نگهداری کنید.

داده‌های فنی

ولتاژ: ۲۳۰ ولت، جریان برق متناوب

توان: ۲۰۰۰ وات

بسامد: ۵۰ هرتز

حداکثر گنجایش مخزن: ۱۰۰۰ میلی‌لیتر

روش جداکردن شلنگ انعطاف‌پذیر پس از استفاده از دستگاه

ماشه را فشار دهید تا بخار کاملاً تخلیه شود؛ سپس شلنگ انعطاف‌پذیر را حدوداً تا سطح خروجی بخار بالا آورید و آن را در خلاف جهت گردش عقربه‌های ساعت بچرخانید.



توجه کنید:

هنگام عملکرد دستگاه، هیچ‌گاه شلنگ انعطاف‌پذیر را جدا نکنید.

عملکرد تمیزکاری پارچه

روش نصب تمیزکننده پارچه

دستگاه را به تدریج بر روی پایه‌اش سوار کنید. نگه‌دارنده را در دهانه ویژه آن قرار دهید و آن را در جایش ثابت کنید. سپس درپوش دستگاه را بردارید و تمیزکننده پارچه را مستقیماً بر روی ورودی آب نصب کنید، آن را بچرخانید و محکم کنید.



توجه کنید:

هیچ‌گاه پیش از نصب کامل تمیزکننده پارچه، دستگاه را روشن نکنید.

برای افزایش کارایی عملکرد تمیزکاری پارچه، پوشش پارچه‌ای و برس را بر روی تمیزکننده سوار کنید.

توجه کنید:

پوشش پارچه‌ای: از محکم بسته‌شدن پوشش پارچه‌ای بر روی تمیزکننده مطمئن شوید، سپس دستگاه را روشن کنید. برس شیب‌دار: در دو طرف تمیزکننده پارچه سوراخی تعبیه شده است. به روش توصیف‌شده، برس شیب‌دار را به این دو سوراخ وصل کنید. سپس برس شیب‌دار را به سمت بالا تا سطح تمیزکننده بلغزانید و آن را ثابت کنید. سپس کلید توان را روشن کنید.



هشدار: هیچ‌گاه هنگام استفاده، پوشش پارچه‌ای یا برس شیب‌دار را از تمیزکننده جدا نکنید.

توجه کنید:

از درست و کامل وصل شدن هر کدام از قطعات با قطعه متناظر آن مطمئن شوید و کلید توان را روشن کنید.

بدنه اصلی

روش ریختن آب در دستگاه

درپوش ایمنی را باز کنید، قیف ارایه شده با دستگاه را در دهانه ورودی آب قرار دهید و با پیمانه مخصوص (۵۰۰ میلی لیتری) ۲ پیمانه آب در دستگاه بریزید، قیف را بردارید و درپوش را محکم ببندید.



توجه کنید:

هیچ گونه مواد شیمیایی یا پاک کننده‌ای در دستگاه نریزید؛ زیرا استفاده از این مواد از ایمنی دستگاه می‌کاهد. تنها از آب معمولی استفاده کنید.

هشدار: هیچ‌گاه دستگاه را بیش از حد معمول از آب پر نکنید.

کاربرد:

دوشاخه را به برق بزنید و کلید توان دستگاه را روشن کنید، دمای مورد نیاز پس از ۶ تا ۱۰ دقیقه به دست می‌آید، و چراغ قرمز روشن می‌شود و بخار آماده است. ماشه را (که بر روی دسته شلنگ قرار دارد) فشار دهید تا بخار خارج شود.



توجه کنید:

دستگاه هنگام عملکرد داغ می‌شود، آن را از دسترس کودکان دور نگه دارید.

هنگام عملکرد دستگاه، خاموش/روشن شدن چراغ قرمز امری عادی است (چراغ قرمز، هیچ‌گاه هنگام استفاده از عملکرد تمیزکاری پارچه روشن نخواهد شد).

روش بازکردن درپوش ایمنی پس از استفاده از دستگاه

دکمه توان دستگاه را خاموش کنید و دوشاخه را از برق بکشید. ماشه را فشار دهید تا فشار/بخار درون دستگاه کاملاً تخلیه شود. هنگامی که دیگر بخاری از دسته شلنگ خارج نشد، بگذارید دستگاه به مدت زمان دست کم ۲۰ تا ۳۰ دقیقه خنک شود. سپس می‌توانید درپوش را به گونه‌ای ایمن جدا کنید.

راهنمای استفاده

چگونگی سرهم‌بندی متعلقات

شلنگ انعطاف‌پذیر:

درپوش ایمنی را باز کنید و یک سر شلنگ انعطاف‌پذیر را در دهانه ویژه آن فرو برید (خروجی بخار)، آن را در جهت گردش عقربه‌های ساعت بچرخانید تا کاملاً در دستگاه چفت شود.




توجه کنید:

هیچ‌گاه پیش از نصب شلنگ انعطاف‌پذیر دستگاه را روشن نکنید.


برای افزایش کارایی تمیزکاری، متعلقات مناسب را به شلنگ انعطاف‌پذیر وصل کنید.

سری‌های صاف، منحنی و مدّور:

دسته شلنگ را در سری صاف قرار دهید. لطفاً به این نکته توجه کنید که تنها یک چفت بر روی دسته شلنگ وجود دارد و مطمئن شوید که شلنگ با سری صاف کاملاً چفت شده باشد؛ سپس، مرحله بعدی را انجام دهید. در پایان، سری منحنی و برس مدّور را به سری صاف وصل کنید.

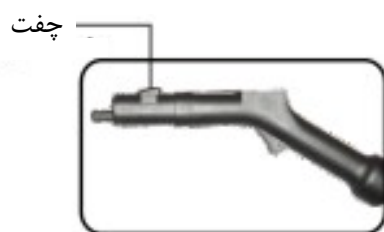

دستگیره شلنگ

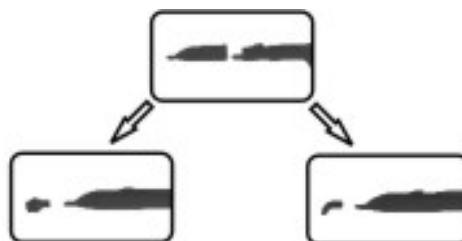

توجه کنید:

هیچ‌گاه بخار را به سمت خود یا افراد دیگر و جانوران نگیرید.

پوشش پارچه‌ای، سری ویژه سطوح، رابط خمیده، لوله گسترش:

ابتدا پوشش پارچه‌ای را بر روی سری ویژه سطوح قرار دهید. سپس، رابط خمیده را در سری سطوح قرار دهید و آن را ۱۸۰ درجه بچرخانید و لوله گسترش را به رابط خمیده وصل کنید؛ سپس لوله گسترش دیگر را به لوله نخستین متصل کنید. در پایان، دسته لوله را به ترکیب این قطعات وصل کنید.



توصیف اجزا



هشدارهای مهم ایمنی

- پیش از استفاده، تمام دستورالعمل‌ها را بخوانید.
- پیش از تمیزکاری و پس از استفاده از دستگاه، دوشاخه را از برق بکشید.
- بدنه دستگاه را بر روی سطحی صاف بگذارید. بدنه، لوازم جانبی و سیم برق را در نزدیکی اشیای داغ قرار ندهید.
- هنگامی که از دستگاه استفاده نمی‌کنید، دوشاخه آن را بکشید. دقت کنید که تنها پس خنک‌شدن لوازم جانبی، آنها را از دستگاه جدا نمایید.
- هنگام عملکرد دستگاه، درپوش ایمنی را باز نکنید. دستگاه را به سمت افراد و جانوران و دستگاه‌های برقی نشانه نروید.
- دستگاه را از دسترس کودکان دور نگه دارید. اگر بخاری از آن خارج نمی‌شود، نشانه آن است که آب درون مخزن تمام شده است. در این حالت، فوراً دوشاخه را از برق کشیده و دستگاه را از آب پر کنید. دستگاه را بدون آب به کار نیندازید.
- هنگام عملکرد، بدنه دستگاه گرم می‌شود.
- تنها می‌توان ۲ پیمانه آب در دستگاه ریخت. از ریختن محلول‌های شیمیایی مانند عطرمایه‌ها، نرم‌کننده‌ها، الکل یا مواد شوینده در آن بپرهیزید.
- پیش از استفاده، از یکی بودن ولتاژ دستگاه با ولتاژ برق منزل تان مطمئن شوید و نیز از مسدود نبودن محل اتصال یا شلنگ اطمینان یابید.
- برای پرهیز از برق‌گرفتگی، بدنه و سیم برق را در آب یا هرگونه مایع دیگری فرو نبرید. در صورت عملکرد نامناسب دستگاه، آن را به مرکز خدمات پس از فروشی که مورد تأیید سازنده است، تحویل دهید تا برای تان تعمیر کنند.
- اگر سیم برق دستگاه آسیب دیده بود، برای پرهیز از خطر آن را به سازنده، مرکز خدمات پس از فروش یا تعمیرکاری ماهر تحویل دهید تا برای تان تعویض کنند.
- از دستگاه برای تمیزکاری استخری که محتوی آب است، استفاده نکنید.
- لطفاً پس از استفاده، آب مانده را دور بریزید؛ هر بار دستگاه را از آب تازه پر کنید.
- حداکثر گنجایش دستگاه ۱۰۰۰ میلی‌لیتر است، بیش از حد معمول آن را پر نکنید.
- از دستگاه تنها در مواردی استفاده کنید که برای آن در نظر گرفته شده است. (برای استفاده در منزل)
- از فروردن هرگونه وسیله‌ای که سازنده توصیه نکرده باشد، در دهانه ورودی آب یا خروجی بخار بپرهیزید.

ویژگی‌های عمده دستگاه بخارشوی:

- استفاده از این دستگاه، روشی به مراتب مؤثرتر و بهداشتی‌تر از روش‌های سنتی تمیزکاری است.
- این دستگاه با تولید بخاری با دمای زیاد، باکتری‌ها را از بین می‌برد و ذره‌های کوچک گردوغبار را می‌زداید.
- دستگاه بخارشوی دستیاری حرفه‌ای در منزل است و به اضافه کردن پاک‌کننده‌ها و هرگونه ماده شیمیایی دیگر به مخزن دستگاه نیازی نیست؛ صرفاً از آب معمولی استفاده کنید. از این دستگاه برای تمیزکاری کف اتاق، آشپزخانه، توالیت و مکان‌های دور از دسترس می‌توان استفاده کرد. همچنین به عنوان تمیزکننده پارچه نیز قابل استفاده است. هنگامی که بخار/فشاری در جوش‌آور دستگاه باقی مانده باشد، درپوش ایمنی باز نمی‌شود. هر چقدر هم که تلاش کنید، به نتیجه‌ای نمی‌رسید! بنابراین این ویژگی برای افرادی که دفترچه راهنما را به طور کامل نخوانده‌اند و سعی می‌کنند در هنگام عملکرد، درپوش را باز کنند، مفید است.
- تا هنگامی که بخار یا فشاری در جوش‌آور باقی مانده باشد، بازکردن درپوش دشوار است. برای بازکردن درپوش به روش توصیف‌شده در متن عمل کنید.

Feller®

دفترچه راهنمای

بخارشوی



ST 1200

Steam Cleaner